

ARCTIC AIR[®]

ICE JET X3

INSTRUCTION MANUAL



READ ENTIRE MANUAL BEFORE USE

Congratulations! You're officially cooler for buying the Arctic Air® Ice Jet X3!

If you have any questions or encounter any issues, please visit:

www.ArcticAirIceJetX3info.com


or scan the code for troubleshooting tips.

If you can't find the answer, feel free to
email our customer service team at:

AAIceJetX3@rephelpdesk.com




WHAT'S INCLUDED:

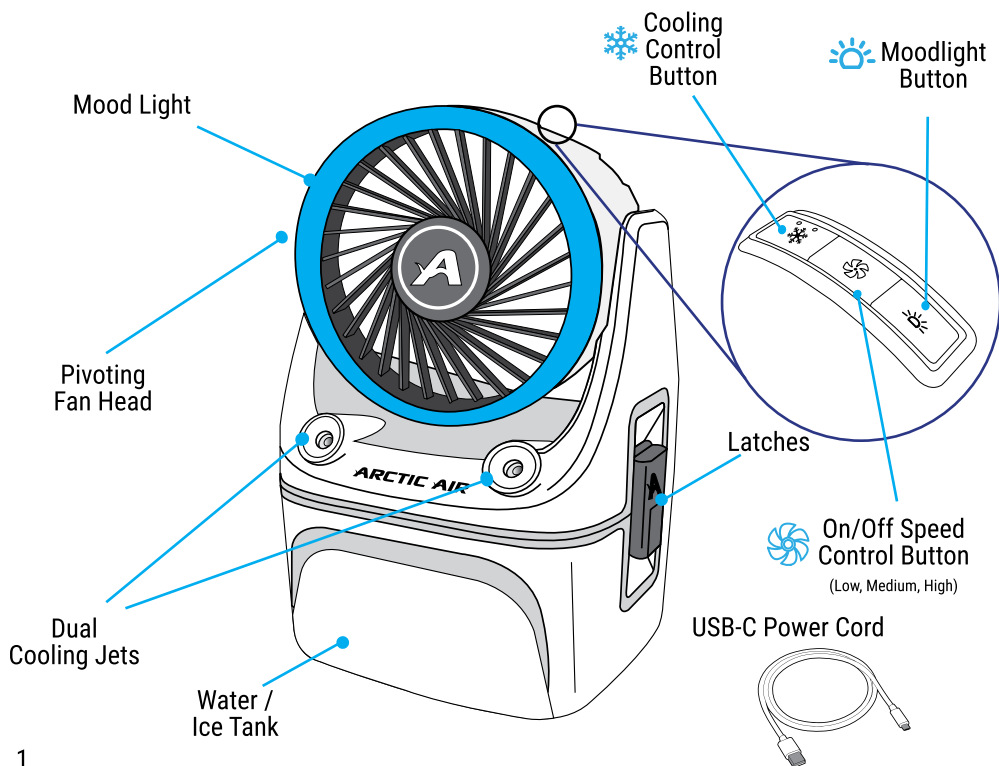


SETUP:

1. Loosen the latches on the side of the Water/Ice Tank to remove Fan and place aside.
See Fig. 1

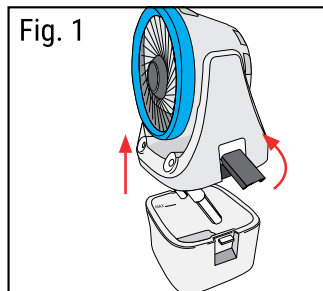


2. Fill tank with ice just below the top, then fill with water to just below the top. See Fig. 2

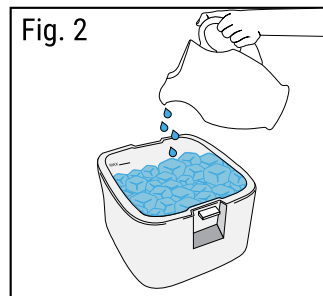


NOTE: DO NOT OVERFILL WITH ICE AND/OR WATER. You will not be able to re-assemble fan and lock in place.



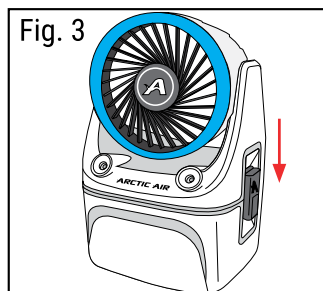

3. Place fan back on top of tank and lock latches down. Be sure Fan is securely in place.
See Fig. 3









USAGE:

1. Using included power cable, plug small end into port located on the back of the fan. See Fig. 4
2. Plug the large end of cable into a USB power adapter, and plug into a standard outlet. See Fig. 5
3. To turn on, press the  button. You can choose from high, medium, and low fan speeds. See Fig. 6
4. To control the dual cooling jets, press the  button. You can choose from high, low, and off. See Fig. 7
5. To control the moodlight, press the  button. You can choose between Teal, Red, White, Blue, Purple, Yellow, Green, or Color Cycle mode. See Fig. 8

NOTE: To adjust brightness, hold  button for 3 seconds. Light will begin to get brighter and dimmer. When at your desired level, press  button again to lock in choice.

6. Adjust airflow direction by pivoting head up/down until desired placement is reached. See Fig. 9

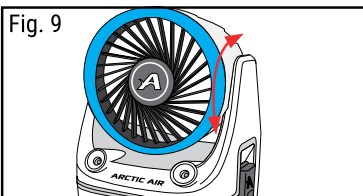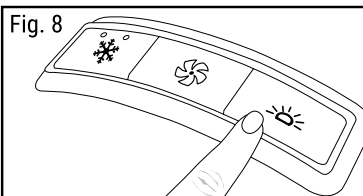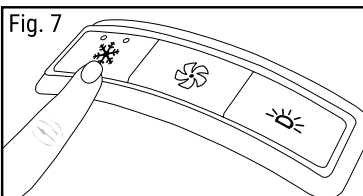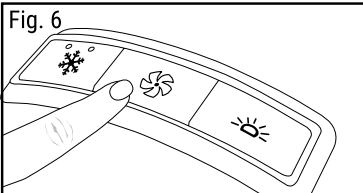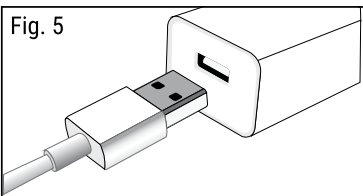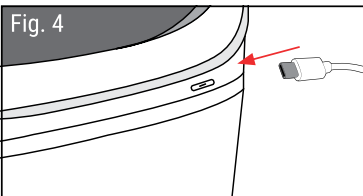

MAINTENANCE:

To keep your Ice Jet X3 in the best working condition, we recommend weekly cleaning with a clean, damp cloth. If you do not plan to use for an extended period of time, it is recommended that you empty and let unit dry before storing. Store in a cool, dry place until ready to use again.

WARNINGS:

- Do not carry Arctic Air® Ice Jet X3 when filled with water. Some water may remain in unit even if tank is empty.
- Use only clean water. If needed, use distilled water.
- Please read and follow regular maintenance as recommended in “Maintenance” section of this guide.
- Arctic Air® Ice Jet X3 works best in non-polluted areas. Large dust/dirt particles may reduce lifetime of unit.
- We recommend use only in dry locations. If using in a moist area or environment, take care not to get water on external areas of the product.
- If a leak or spill occurs on the surface of device, unplug Arctic Air® Ice Jet X3 and let it dry for 24 hours. Then, use as normal.
- Do not place in direct sunlight for extended periods of time.
- Before not using Arctic Air® Ice Jet X3 for extended periods of time, empty the Water Tank, turn unit on, and set to highest fan speed for at least 4 hours.
- Only use the original cord supplied in package.
- Do not touch the power supply or power cord with wet hands.
- Unplug Arctic Air® Ice Jet X3 when cleaning, or moving the device.
- For best results, place Arctic Air® Ice Jet X3 on a higher surface like a table or countertop.
- Do not place Arctic Air® Ice Jet X3 near a heater or any electrical equipment.
- Do not place the device in passageways or high traffic areas where there is a possibility of tripping or knocking it over.
- Do not allow any foreign objects inside Arctic Air® Ice Jet X3.
- Do not place items on top Arctic Air® Ice Jet X3.
- Do not block the front and back grills of the device.
- Do not turn the device upside down.

WARNINGS (CONT.):

- Do not submerge the Arctic Air® Ice Jet X3 under water or other liquids.
- Do not place Arctic Air® Ice Jet X3 near open flames or fire sources.
- People with limited physical, visual or mental abilities or lacking proper experience and/or knowledge should never use the device without supervision of those responsible for their safety or those capable of assistance in using the device.
- The device can be switched off completely only when disconnected from the power supply.
- The manufacturer does not bear any responsibility for any damage from failure to comply with this product guide.

ONTEL® ASSUMES NO RESPONSIBILITY FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF YOUR USE OF THE PRODUCT. IN PURCHASING AND USING THIS PRODUCT, YOU ASSUME ALL RESPONSIBILITY FOR CLEANING THE PRODUCT AND MONITORING THE PRODUCT FOR MOLD. ADDITIONALLY, ONTEL® SPECIFICALLY DISCLAIMS ALL EXPRESSED WARRANTIES NOT OTHERWISE SET FORTH HEREIN AND ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. THERE ARE NO WARRANTIES WHICH EXTEND BEYOND THE DESCRIPTION OF THE FACE HEREOF.

FOR HOUSEHOLD USE ONLY

